


Control Buttons

MODEL AL-A25/929

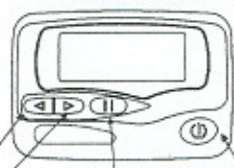

Select Button

Function Button

Read Button

Read Button

- to read message
- to turn on back-light
- to turn on power
- to activate the function

Select Button

- to move the cursor
- to preview message by cycles

Function Button

- to display the function menu
- to adjust the time and date change
- to enable the function mode
- to move cursor to general or mail drop area

Features and Functions

- 4-Line, 84 English Alpha Character Memory
- Easy-To-Read Back-Lit Display
- Up To Memory Capacity 28,627 Characters.
- 16 Memory Slots + Message Full 10 sets
- Personal Message Memory : 10 sets, Mail Drop Available
- Show Time Of Day And Date
- User Selectable 12 / 24 Hour Clock
- Message Date And Time Stamping
- Incomplete Message-In Indication
- Duplicate Message Indicator
- Locks Important Message (Up To 10 Sets)
- All Or Individual Message Delete
- Unread Message Indicator, Reminder Alert

- Low Battery Alert, Low Battery Indicator
- Zoom The Display - To Enlarge Message For Easy Read Ability
- Message Full Indication, Message Full Auto Storage
- Message Preview For A Quick Look At Each Message
- Message Move to Memo (User selectable)
- Service Area Indication
- 5 Built-In Alarm Clock
- 4 Beep Alerts / Silent Vibration / Silent then Beep / 8 Musical / Sleep Mode
- Private Time - For The Ability To Turn Off All Pager Alerts During Pre-Selected Times
- Mail Drop Alerts
- Save Message When Off And When Changing Battery

LCD Display



Pager Status Symbols

- POWER ON INDICATOR
- MUSIC ALERT
- BEEP ALERT
- AUTO SLEEP INDICATOR
- ALARM INDICATOR
- AUTO SCROLL INDICATOR
- BATTERY CAPACITY
- OUT OF RANGE INDICATOR
- ERROR MESSAGE
- DUPLICATE MESSAGE
- MAIL DROP MESSAGE
- MEMO MESSAGE INDICATOR

Message Status Symbols

 
 
 
 
- MESSAGE IN MEMORY
- MESSAGE SELECTING
- MESSAGE LOCK IN MEMORY
- MESSAGE LOCK SELECTING
- PERSONAL MESSAGE
- FULL MESSAGE
- PERSONAL MESSAGE SELECTING
- FULL MESSAGE SELECTING
- MAILDROP IN MEMORY
- MAILDROP SELECTING
- DUPLICATE MESSAGE

Function Menu Symbol

- UP OR ESCAPE
- SET ALERT
- PAGER OFF
- SET AUTO SLEEP
- SET ALARM
- SET TIME
- SET SCROLL
- ZOOM IN / ZOOM OUT
- MESSAGE LOCK
- MESSAGE DELETE
- DELETE ALL
- MOVE TO MEMO
- MAIL DROP ALERT



Receiving And Reading Your Message

- A flashing ▲ symbol indicates you have a message has not been read. (The symbol ▼ of mail drop shows on screen by flashing).
- Press ◀ or ▶, to preview the message.
- Press ○, to display your message. Press ○ again, to view the next screen.
- If you have set "Auto Scroll", your pager will scroll through your message screen by screen automatically.



Locking Messages

- Press ◀ or ▶, to move the cursor to the desired flashing symbol.
- Press ||, press ◀ or ▶ to select the desired message to lock.
- Press ||, to lock the message.
- The symbol ■ is displayed, indicating the status of the message in memory.

  

Unlocking Messages

- Press ◀ or ▶, to move the cursor to select the message to unlock.
- Press II, then, press ◀ or ▶, to "MESSAGE UNLOCK" Mode.
- Press II, to unlock the message.

05:Pls Call818-123456
7,Divid.
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
UP OR ESCAPE
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
MESSAGE UNLOCK
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
12:35PM 4/15/98

Deleting Messages

- Press ◀ or ▶, to move the cursor to select the message you desire. Press II to read the message.
- Press II, press ◀ or ▶, to display "MESSAGE DELETE" Mode.
- When "MESSAGE DELETE ?" is displayed on the screen, press ▶ to delete the message.

05:Pls Call818-123456
7,Divid.
12:30PM 4/12

05:Pls Call818-123456
7,Divid.
MESSAGE DELETE
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
MESSAGE DELETE ?
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
12:35PM 4/15/98

Deleting All Messages

(All unlocked and read messages)

- Press II, press ◀ or ▶, to "DELETE ALL" Mode.
- When "DELETE ALL ?" is displayed, Press ▶, all unlocked and read messages are deleted.

05:Pls Call818-123456
7,Divid.
UP OR ESCAPE
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
DELETE ALL
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
DELETE ALL ?
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
12:35PM 4/15/98

Move Message To Memo

- Press ◀ or ▶, to move the cursor to the desired storing message. Press II to read the message.
- Press II, and press ▶ once, to move to "MOVE TO MEMO".
- Press II, to move the flashing icon message automatically into your memo mail.

05:Pls Call818-123456
7,Divid.
12:30PM 4/12

05:Pls Call818-123456
7,Divid.
MOVE TO MEMO
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
MOVE TO MEMO
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
12:35PM 4/15/98

Setting Alert

- Press II, then, press ◀ or ▶ once to display "SET ALERT" Mode.
- Press II, to enable "SET ALERT".
- Press II, to move the cursor to the desired alarm mode. (Alert / Musical / Vibration / Sleep are optional)
- Press ◀ or ▶, to move to the cursor to the desired tone or music.
- Press II setting the alert is completed.

05:Pls Call818-123456
7,Divid.
SET ALERT
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
1234
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
12345678
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
12
SILENT
12:35PM 4/15/98

Setting Alert

- The ◀ or 12 symbol is displayed if the message receiver is in the audible or musical mode.
- The ◀ or 12 symbol won't display on screen if the receiver is in the silent mode or sleep mode.

12
SILENT THEN BEEP

SLEEP

05:Pls Call818-123456
7,Divid.
12:35PM 4/15/98

05:Pls Call818-123456
7,Divid.
12:35PM 4/15/98

Turning Your Pager Off

- Press **II**, then, press **◀** or **▶**, to "PAGER OFF" mode.
- Press **II**, till "PAGER OFF?" appears on the screen.
- Press **▶**, to turn the pager off.
- After turning your pager off, the screen is empty.
- Press **⓪**, to turn the pager power on.

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 UP OR ESCAPE
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 PAGER OFF
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 PAGER OFF?
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 PAGER OFF?
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲

Setting Auto Sleep

- Press **II**, then, press **◀** or **▶** to display "Auto Sleep" mode.
- Press **II**, to enable "Auto Sleep Set" Mode.
- Press **II**, to select "open" or "close" (symbol **⓪** or **-**) and adjust the digits, press **◀** or **▶** for moving the cursor.
- Press **⓪** setting auto sleep mode is completed. The screen returns to stand-by status.
- ⓪** is displayed when the Auto Sleep mode is set.
- The enable **z** symbol indicates your pager is during setting status.

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 AUTO SLEEP SET
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 START END
 - 9:00PM 9:00AM

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 START END
 ⓪ 9:00PM 9:00AM

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 12:35PM 4/15/98

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 12:35AM 4/15 **z**

Setting Alarm (5 alarms)

- Press **II**, then, press **◀** or **▶** to "SET ALARM" Mode.
- Press **II**, to enable.
- Press **◀** or **▶**, to move the cursor.
- Press **II**, to set the alarm status either alarm enabled, alarm disabled or set time.
- Press **⓪** setting the alarm is completed.

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 SET ALARM
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 ALARM SET
 [1] 12:00AM

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 ALARM SET
 [1] 12:00AM

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 12:35PM 4/15/98

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 12:35PM 4/15/98

Setting Time And Date

- Press **II**, then, press **◀** or **▶** once until "SET TIME" Mode is displayed.
- Press **II**, to enable set time.
- Press **◀** or **▶**, to move the cursor to the hour / minute digit. Then press **II** to adjust each set of digits : AM/ PM/24 hr / month / day.
- Press **⓪** to activate the time and date change.

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 UP OR ESCAPE
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 SET TIME
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 TIME SET
 12:35PM 4/15/98

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 12:35PM 4/15/98

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 12:35PM 4/15/98

Setting Scroll

- Press **II**, then, press **◀** or **▶**, to "SET SCROLL" Mode.
 - Press **II**, to enable scroll automatically.
 - Press **II**, to select the speeding of scroll.
- slow.
 - normal.
 - rapid.
 - X** -- off

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 SET SCROLL
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 SCROLL SET
 □ : X

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 SCROLL SET
 □ : —

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 SCROLL SET
 □ : —

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 SCROLL SET
 □ : —

Setting Scroll

- Press **▶** to activate the function.
- When the Auto scroll is set, the **⓪** symbol is displayed on screen.

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 SCROLL SET
 □ : —

① ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲ ㊄
 ▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲
 12:35PM 4/15/98


Setting Zoom In / Zoom Out

- Press **II**, then press **◀** or **▶**, to "ZOOM IN". (symbol ). Then, press **II** to confirm.
- The letters on screen enlarge and become two lines to read.
- Or press **◀** or **▶** to move the cursor again to "ZOOM OUT" (symbol ), and press **II** to complete.
- The letters on screen change to four lines to read.




Reading Mail Drop

- Press **II** twice, to move the flashing icon in the second row.
- Press **⓪**, to read message or press **◀** or **▶**, to move the icon to the desired Mail drop.
- The features allows 14 sets Mail Drop

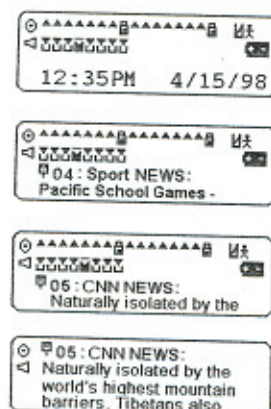


Moving the Cursor

- Press **◀** or **▶** to move cursor to the  icon flashes, indicating the present position of the message you are going to read.
- Press **II**, the screen shows "UP OR ESCAPE".
- Press **II** once, the flashing icon can be move to the top row or the second row, such like "MAIL DROP AREA" or "MESSAGE AREA".
- Press **II**, the pager returns to standby mode.

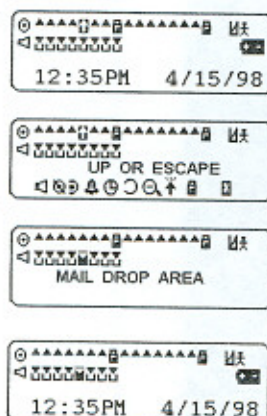


Reading Personal Message

- Press **◀** or **▶**, to move the flashing icon to the  symbol.
- Press **⓪**, to read message.
- When the  symbol is shown in the top left-hand corner of the display, indicates the message status as a personal message.

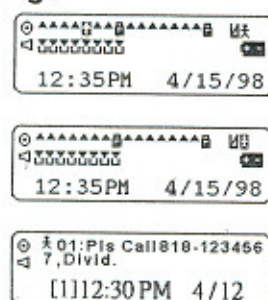

Reading Full Message

- Press **◀** or **▶**, to move the flashing icon to the  symbol.
- Press **⓪**, to read message.
- When the  symbol is shown in the top left-hand corner of the display, indicates the message status as a full message.

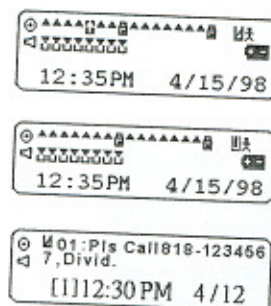


Backlighting

You can manually activate the back-lit at any time by pressing and holding **⓪** for three seconds. If no other buttons are pressed, the back-lit automatically turns off when the pager returns to the standby mode.

Duplicate Message

 The pager automatically covers by the latest messages if it is received the same message. The  symbol is shown in the top left-hand corner of the display, indicates the message status as a "Duplicate Message".



Error Message

If it is received the error message. The  symbol is shown in the top left-hand corner of the display, indicates the message status as a Error message.

Battery Gauge

The battery indicator is located on the status screen and keeps you informed of battery energy level. The three indicators range  (1/2),  (low). Whenever the low battery shows on display, Please replace the new battery in to make sure the pager is in receivable condition.

05:Pls Call 818-123456
7,Di7
[1]12:30PM 4/12

12:35PM 4/15/98

12:35PM 4/15/98

Set Mail Drop Alert

- To move the cursor to the Mail Drop.
- Press , to display the function menu.
- Press  or , to move the cursor to set mail drop alert ().
- Press , to activate the function. Or press , to exit the function.

MAIL DROP AREA

UP OR ESCAPE

UP OR ESCAPE

12:35PM 4/15/98

USER MANUAL

• Alpha-Numeric Display Pager •

MODEL: AL-A25e / AL-929
FP-A25e